



# Assembly Instructions

## LCD Surface Mount TAU14

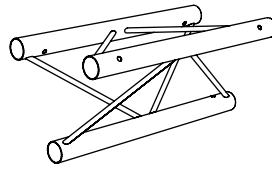




# FORtruss™

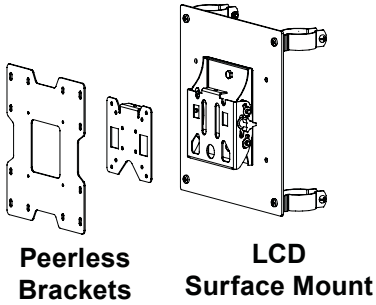


### Step 1

Configure the **Clamps** on back of **LCD Surface Mount Plate** for connection in **Vertical** or **Horizontal Orientation**.

To reconfigure Clamp orientation, loosen **Screws** that attach the **Clamps** to the **Plate**, rotate Clamps in orientation needed as shown below and re-tighten Screws.

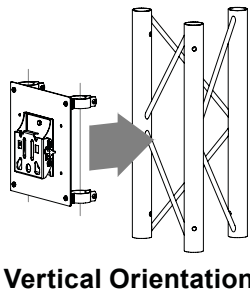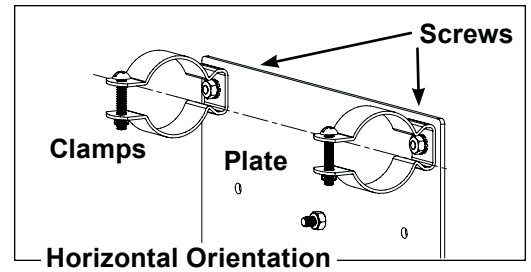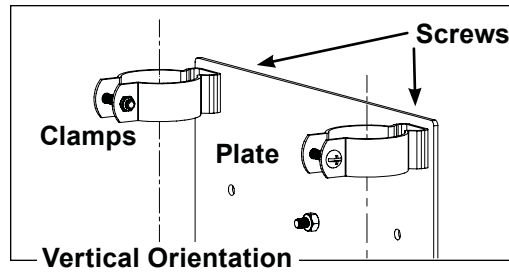


Vertical Orientation

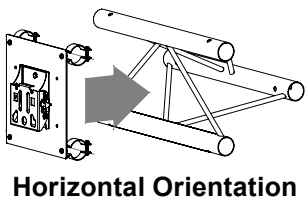

Horizontal Orientation



### Step 2

Connect the **LCD Surface Mount** to **Truss** at desired location securely with attached **Pipe Clamps**.

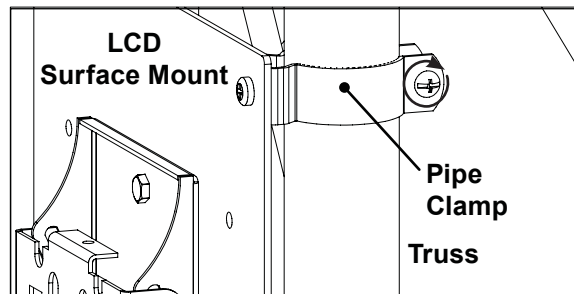

### Step 3

Connect the appropriate **Peerless Bracket** to your **LCD** following instructions in Peerless Installation and Assembly documentation provided by manufacturer.

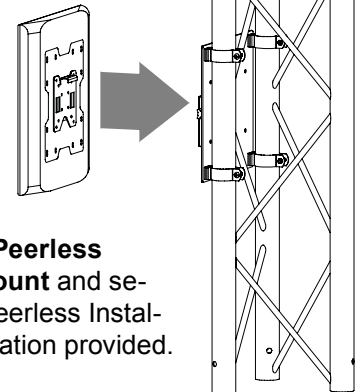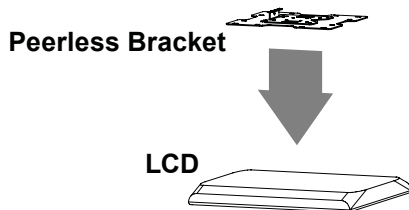

### Step 4

Hang your LCD with attached **Peerless Bracket** onto **LCD Surface Mount** and secure following instructions in Peerless Installation and Assembly documentation provided.

52677 - 08/09/07



Member

7316 Aspen Lane North  
suite 300  
Minneapolis MN 55428-1109

e mail: [info@interlockstructures.com](mailto:info@interlockstructures.com)  
web: [www.interlock.biz](http://www.interlock.biz)

# INTERLOCK®

Interlock Structures International, Inc.

voice: 763.425.1464  
800.468.1497  
fax: 763.425.8205