



Assembly Instructions

Plasma Surface Mount TAU30

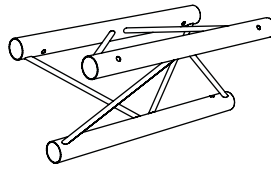

FORtruss™

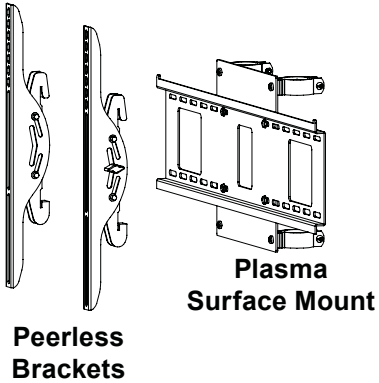



Peerless
Brackets

Plasma
Surface Mount

Step 1



Configure the **Clamps** on back of **Plasma Surface Mount Plate** for connection in **Vertical** or **Horizontal Orientation**.

To reconfigure Clamp orientation, loosen **Screws** that attach the **Clamps** to the **Plate**, rotate Clamps in orientation needed as shown below and re-tighten Screws.

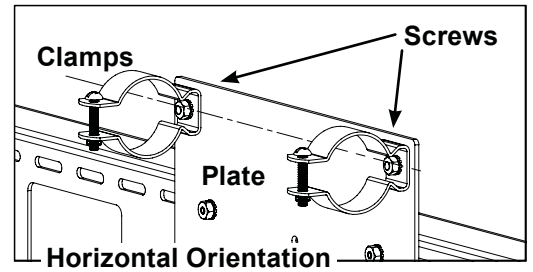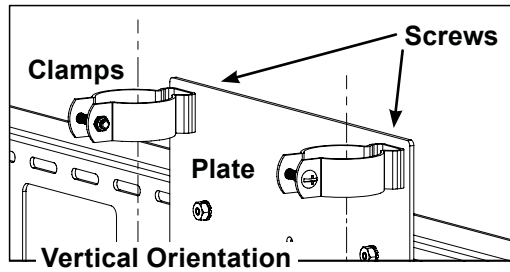


Step 2

Connect the **Plasma Surface Mount** to **Truss** at desired location securely with attached **Pipe Clamps**.

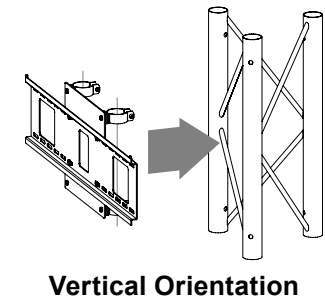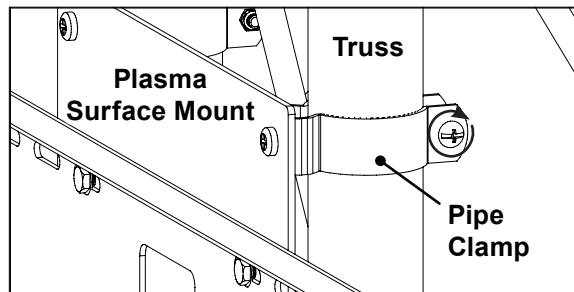

Vertical Orientation

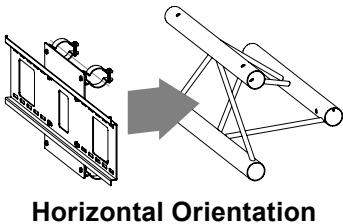


Horizontal Orientation

Step 3

Connect the **Peerless Brackets** to your **Plasma** following instructions in Peerless Installation and Assembly documentation provided by manufacturer.


Peerless Brackets

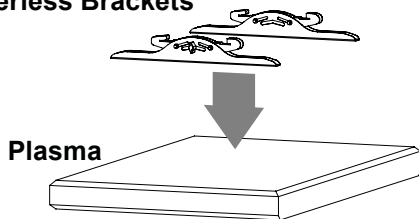

Plasma

Step 4

Hang your Plasma with attached **Peerless Brackets** onto **Plasma Surface Mount** and secure following instructions in Peerless Installation and Assembly documentation provided.

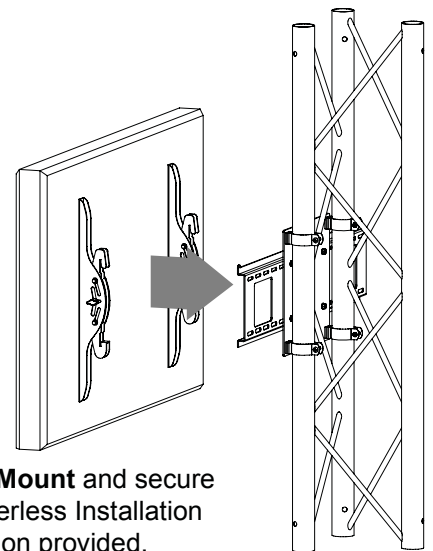

52678 - 08/09/07



Member

7316 Aspen Lane North
suite 300
Minneapolis MN 55428-1109

e mail: info@interlockstructures.com
web: www.interlock.biz

INTERLOCK®

Interlock Structures International, Inc.

voice: 763.425.1464
800.468.1497
fax: 763.425.8205