


# Assembly Instructions

## Connection Detail

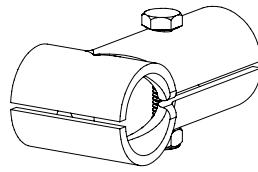

# THREeway

### Step 1

Rest the **Connecting Tube** against the **Cross Tube** at the desired location.

### Step 2

Sandwich both tubes with the two **Threeway Halves**.



### Step 3

Using the supplied **Hex Head Bolt** and **Nut**, hand tighten the connection.

**Note:** With the connection hand tightened you can adjust the placement, if needed.

### Step 4

When placement is determined, secure the connection by tightening the Hex Head Bolt and Nut.

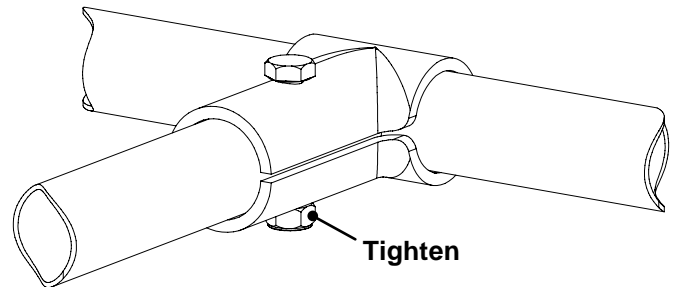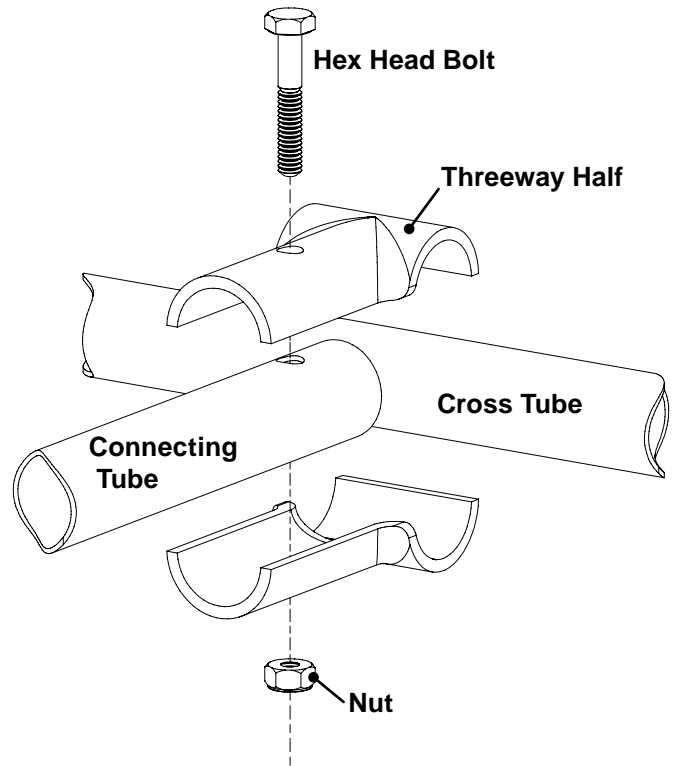

### Important:

Each Tube connection must have:

2 - Threeway Halves

1 - Hex Head Bolt

1 - Nut

To assemble without these specified parts would result in an unsafe condition and possible collapse of the truss assembly.

41820 - 04/05/07



Member

7316 Aspen Lane North  
suite 300  
Minneapolis MN 55428-1109

e mail: [info@interlockstructures.com](mailto:info@interlockstructures.com)  
web: [www.interlock.biz](http://www.interlock.biz)

voice: 763.425.1464  
800.468.1497  
fax: 763.425.8205

# INTERLOCK<sup>®</sup>

Interlock Structures International, Inc.