



Assembly Instructions

Plasma Surface Mount AAU30

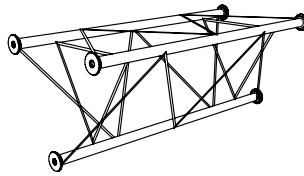

SNAPtruss®

PAT.US 4776721

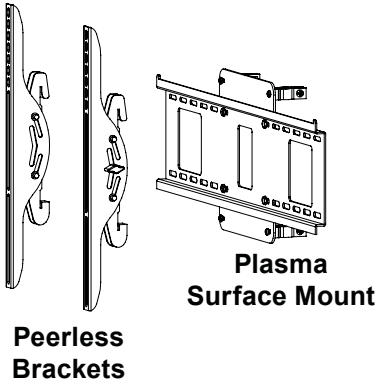


Peerless
Brackets

Plasma
Surface Mount


Step 1

Configure the **Clamps** on back of **Plasma Surface Mount Plate** for connection in **Vertical** or **Horizontal Orientation**.


To reconfigure Clamp orientation, loosen **Screws** that attach the **Clamps** to the **Plate**, rotate Clamps in orientation needed as shown below and re-tighten Screws.

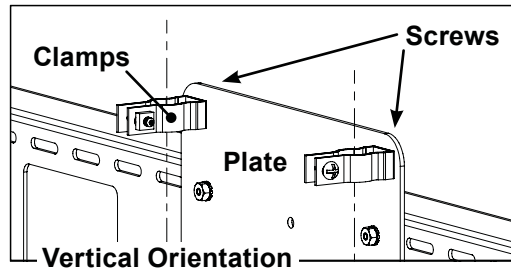


Vertical Orientation

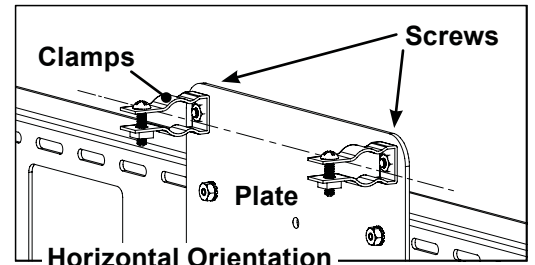

Horizontal Orientation

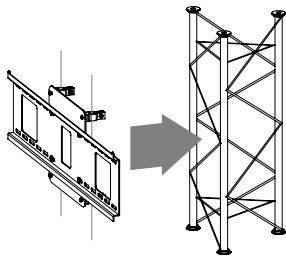


Vertical Orientation

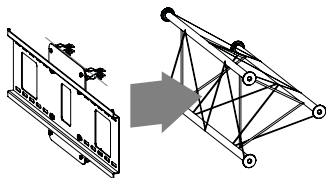

Horizontal Orientation

Step 2


Connect the **Plasma Surface Mount** to **Truss** at desired location securely with attached **Pipe Clamps**.

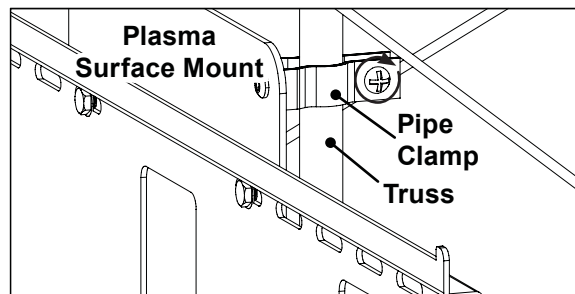

Step 3

Connect the **Peerless Brackets** to your **Plasma** following instructions in Peerless Installation and Assembly documentation provided by manufacturer.


Peerless Brackets

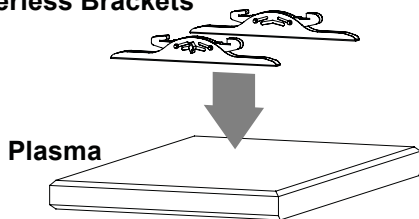

Plasma

Step 4

Hang your Plasma with attached **Peerless Brackets** onto **Plasma Surface Mount** and secure following instructions in Peerless Installation and Assembly documentation provided.

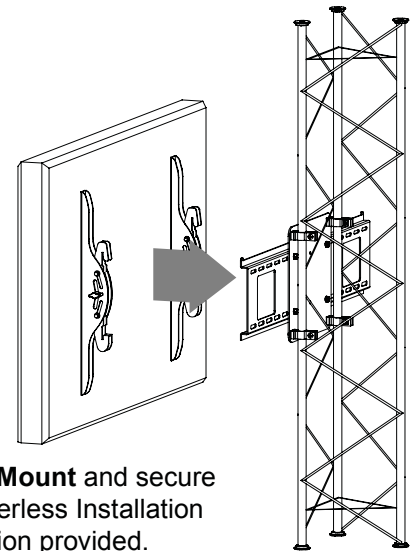

52080 - 07/30/07

INTERLOCK®

Interlock Structures International, Inc.



Member

7316 Aspen Lane North
suite 300
Minneapolis MN 55428-1109

e mail: info@interlockstructures.com
web: www.interlock.biz

voice: 763.425.1464
800.468.1497
fax: 763.425.8205